
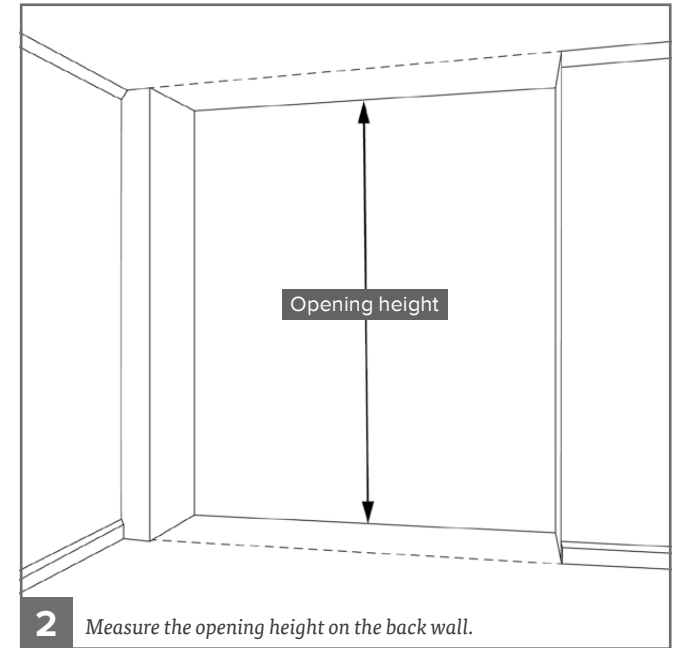


HOW TO PLAN FOR MODULAR STORAGE

Assembly Instructions

TOOLS REQUIRED:

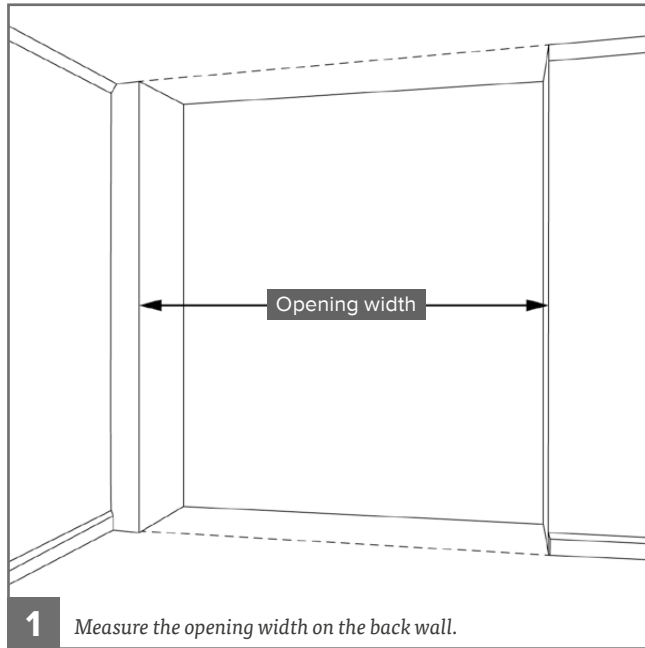

Now you have measurements, divide your space into either 530mm or 1030mm sections.

Use 30mm for every stanchion and add 30mm to your total width to account for each end of your storage system.

For **500mm** wide accessories allow

530mm

For **1000mm** wide accessories allow

1030mm

These measurements are from the centres of each stanchion.

v1